

SAVE THESE INSTRUCTIONS

## NOTICE

There may be risks associated with the use of this product. The health effects of concentrated oils OR waxes and heated titanium have not been established. Use this product at your own risk.

## WARNING RISK OF INJURY

Read these instructions before operating this equipment. Failure to follow instructions may cause severe injury or death.

## WARNING RISK OF BURNS

This appliance is hot when in use. This product can burn eyes or skin. Do not let heated surfaces touch eyes or skin. Heat rises from the heater coil; do not locate eyes or body in path of heat.

## WARNING

- Burn Hazard; keep out of reach of children.
- Fire Hazard; do not leave unit un-attended.
- For indoor, dry-location use only.
- Never immerse appliance or heater coil in liquid.
- Do not operate appliance where it can fall into a tub or sink.
- Unplug when not in use.
- Do not remove the ground pin from the plug.
- Use only the power cord provided. For replacement cords please contact the factory.
- Use only the heater coil and nail provided.
- Do not operate the heater coil without a nail installed or with another brand of nail. Doing so will void your coil warranty.
- Always allow nail and coil to cool to room temperature before touching, storing or transporting.
- Never operate this appliance if it has been dropped or damaged, or dropped into liquid.
- Keep the cords away from the heat.
- Always remove cords by pulling on the plug, not the cable.
- Never block air openings of the appliance or place it on a soft surface such as a bed or couch, where air openings may be blocked.
- Do not use this product while impaired.

## Specifications

E500-120: 120VAC 60Hz 201W PEAK  
Temperature Setting Range: 0-850°F (0-450°C)  
Off Timer Range: 3-420 Minutes  
Warm-Up Time: ~2 Minutes  
Stability: +/- 10°F  
Soft-Heat™ Power Regulation

## Warranty

Jibtronix Corporation warrants that all manufactured products are, to the best of its knowledge, free of defective material and workmanship and warrants the Errlectric Concentration Station controller and Heater Coil for **3 years** from the date of purchase. This warranty is extended to the original purchaser from the date of receipt. This warranty does not cover damages from abuse, accidental breakage, or units that have been modified, altered, or installed in a manner other than that which is specified in the installation instructions. Jibtronix Corporation must be contacted prior to return shipment for a return authorization. No returns will be accepted without a return authorization. This warranty is applicable only to products that have been properly stored, installed, and maintained per the installation and operation manual and used for their intended purpose. This limited warranty does not cover products installed in or operated under unusual conditions or environments including, but not limited to, high humidity or high temperature conditions. The products which have been claimed and comply with the aforementioned restrictions shall be replaced or repaired at the sole discretion of the Jibtronix Corporation at no charge upon receipt at our factory. This warranty is provided in lieu of all other warranty provisions, express or implied. It is including but not limited to any implied warranty of fitness or merchantability for a particular purpose and is limited to the Warranty Period. In no event or circumstance shall Jibtronix Corporation be liable to any third party or the claimant for damages in excess of the price paid for the product, or for any loss of use, inconvenience, commercial loss, loss of time, lost profits or savings or any other incidental, consequential or special damages arising out of the use of, or inability to use, the product. This disclaimer is made to the fullest extent allowed by law or regulation and is specifically made to specify that the liability of Jibtronix Corporation under this limited warranty, or any claimed extension thereof, shall be to replace or repair the Product or refund the price paid for the Product.

# Errlectric®


## Concentration Station™

### QUAD Model E500

## Operation Manual

### Setup

1. Install the heat-shield provided onto the nail stem.
2. Install the nail into a 14mm or 18mm female ground glass joint.
3. If using a FQN, Herb Nail, or Infinity Coil, please see assembly instructions for these coils.
4. Plug the heater coil cable into the front of the Errlectric Concentration Station.  
*Use caution to align the pins correctly.*
5. Plug the power cord into the back of the Errlectric Concentration Station.
6. Plug the power cord into a power socket. The display will illuminate and "Errlectric ©2016" will scroll across the display and a self-test will occur.
7. The screen will display the temperature readings and power status for each heater. If "----" is shown instead of a temperature, there is no coil detected at the port.
8. After 10 seconds the display will turn off (if the temperatures are all below 100°F.) Press any button to turn the display back on.

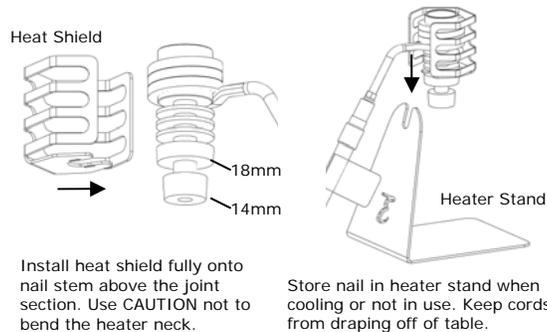

Install heat shield fully onto nail stem above the joint section. Use CAUTION not to bend the heater neck.

Store nail in heater stand when cooling or not in use. Keep cords from draping off of table.

### FQN (Full Quartz Nail) Setup

1. Ensure the heater and nail are cool before handling.
2. Slide the FQN quartz bucket into the heater's titanium bucket. Ensure there is no binding and the fit is free.
3. Carefully rotate the heater until the heater neck is resting on the perch rod protruding from the FQN.
4. Clip one hook around the heater neck.
5. Route the silicone band around the FQN tube and clip the other hook onto the heater neck.
6. FQN should be left assembled while heating and cooling.

### Operation

1. Press any button momentarily to illuminate the display if it is off.
2. Press and hold the ENTER button until "Turn ON All Heaters" is displayed.
3. Press ENTER to turn on all heaters that are plugged into the unit, or press DOWN to select an individual heater to turn on or off.
4. The coils will heat up to the set temperatures.
5. To turn the heaters off, press the ENTER button momentarily; "Turn OFF All Heaters" will be displayed.
6. Press ENTER to turn off all heaters or press DOWN to select a specific heater to turn off.
7. The LCD display will remain illuminated displaying the temperatures until the heaters have cooled to a safe handling temperature (less than 100°F/37°C.)
8. Unplug the power cord when not in use.
9. Store the heaters in heater stands when not in use. Do not allow cords to drape off of table.

### Adjust Temperature

1. Press the DOWN button to enter the menu.
2. "Set Temp 1" will be displayed with the current temperature set point.
3. Press DOWN again to scroll to the next heater's set point or press ENTER to modify the set point.
4. Press UP or DOWN to adjust the set point.
5. Press ENTER to save the set point to the memory.
6. Repeat for each heater's set point.

### Temperature Units

1. Press the DOWN button to enter the menu.
2. Press DOWN until "Units" is displayed.
3. Press ENTER to modify the units.
4. Press UP or DOWN change between C or F.
5. Press ENTER to save the setting to the memory.

### Shut-Off Timer

Automatic shut-off timer will turn off the heat when the timer expires and can be set from 3 - 420 minutes.

1. Press the DOWN button to enter the menu.
2. Press DOWN until "Shut-Off Timer" is displayed.
3. Press ENTER to modify the timer.
4. Press UP or DOWN to adjust the time value.
5. Press ENTER to store the value in memory.

### Odometer

Displays total heating time in **years:days:hours**.