

Errlectric®

MobilEnail® Model M701 Operation Manual

SAVE THESE INSTRUCTIONS

NOTICE

There may be risks associated with the use of this product. The health effects of concentrated oils OR waxes and heated titanium have not been established. Use this product at your own risk.

WARNING RISK OF INJURY

Read these instructions before operating this equipment. Failure to follow instructions may cause severe injury or death.

WARNING RISK OF BURNS

This appliance is hot when in use. This product can burn eyes or skin. Do not let heated surfaces touch eyes or skin. Heat rises from the heater coil; do not locate eyes or body in path of heat.

WARNING

LITHIUM BATTERIES

This appliance contains lithium batteries which present the risk of injury, property damage, fire or explosion if misused. Read and follow all warnings on the product and in these instructions. Do not puncture, crush, incinerate or overheat this product.

WARNING

- Burn Hazard; keep out of reach of children.
- Fire Hazard; do not leave unit un-attended.
- For indoor, dry-location use only.
- Never immerse appliance or heater coil in liquid.
- Do not operate appliance where it can fall into a tub or sink.
- Unplug when not in use.
- Do not remove the ground pin from the plug.
- Use only the power cord and charger provided.
- For replacement cords please contact the factory.
- Use only the heater coil and nail provided.
- Do not operate the heater coil without a nail installed or with another brand of nail. Doing so will void your coil warranty.
- Always allow nail and coil to cool to room temperature before touching, storing or transporting.
- Never operate this appliance if it has been dropped or damaged, or dropped into liquid.
- Keep the cords away from the heat.
- Always remove cords by pulling on the plug, not the cable.
- Never block air openings of the appliance or place it on a soft surface such as a bed or couch, where air openings may be blocked.
- Do not use this product while impaired.

Specifications

Model M701: 12Vdc, 70W
Temperature Setting Range: 0-750°F (0-400°C)
Warm-Up Time: 1-2 Minutes
Operating Time: 2hrs@600°F
Stability: +/- 10°F
Soft-Heat™ Power Regulation

Warranty

Jibtronix Corporation warrants that all manufactured products are, to the best of its knowledge, free of defective material and workmanship and warrants the Errlectric® MobilEnail® controller and Heater Coil for **2 years** from the date of purchase excluding the battery which is warranted separately for **6 months**. This warranty is extended to the original purchaser from the date of receipt. This warranty does not cover damages from abuse, accidental breakage, or units that have been modified, altered, or installed in a manner other than that which is specified in the installation instructions. Jibtronix Corporation must be contacted prior to return shipment for a return authorization. No returns will be accepted without a return authorization. This warranty is applicable only to products that have been properly stored, installed, and maintained per the installation and operation manual and used for their intended purpose. This limited warranty does not cover products installed in or operated under unusual conditions or environments including, but not limited to, high humidity or high temperature conditions. The products which have been claimed and comply with the aforementioned restrictions shall be replaced or repaired at the sole discretion of the Jibtronix Corporation at no charge upon receipt at our factory. This warranty is provided in lieu of all other warranty provisions, express or implied. It is including but not limited to any implied warranty of fitness or merchantability for a particular purpose and is limited to the Warranty Period. In no event or circumstance shall Jibtronix Corporation be liable to any third party or the claimant for damages in excess of the price paid for the product, or for any loss of use, inconvenience, commercial loss, loss of time, lost profits or savings or any other incidental, consequential or special damages arising out of the use of, or inability to use, the product. This disclaimer is made to the fullest extent allowed by law or regulation and is specifically made to specify that the liability of Jibtronix Corporation under this limited warranty, or any claimed extension thereof, shall be to replace or repair the Product or refund the price paid for the Product.

Operation

1. **BATTERY SWITCH:** If equipped, a switch on the top of the unit disconnects the battery.
2. **POWER ON:** Press the MIDDLE button five times to turn the power on; the E logo will display several seconds.
3. The screen will display the temperature reading, battery status and menu options.
4. **POWER OFF:** Press the LEFT button to turn the unit OFF (power symbol.)
5. **HEATER CONTROL:** Press the RIGHT button to toggle the heater ON or OFF.
6. **MENU:** Press the MIDDLE (MENU) button to enter the SETUP MENU.
7. Unplug the power cord and heater coil when not in use.
8. Store the heater in the heater stand when hot. Do not allow cord to drape off of table.

Charging

When "LOW BATT" is displayed, stop using the unit and allow to fully recharge before continuing use. MobilEnail should be charged with the included charger.

1. DO NOT USE chargers other than the charger included with this product.
2. Plug the power cord into the charger DC jack connector at the top of the MobilEnail.
3. Depending on the current battery charge, a full charge can take 1 – 4 hours.

CHARGE LED

GREEN: Full Charge | ORANGE: Charging
FLASHING ORANGE & GREEN: Battery Error

Adjust Temperature

1. Press the MENU button to enter the MENU.
2. Press the SEL button to modify the temperature.
3. Use the UP/DOWN buttons to adjust the temperature to the desired set point.
4. Press the SEL button to set the temperature.
5. Use the UP or DOWN buttons to select EXIT and press SEL to exit the menu.


Temperature Units

1. Press the MENU button to enter the MENU.
2. Press DOWN button to highlight UNITS.
3. Press SEL to modify the units.
4. Press UP or DOWN to change between C or F.
5. Press SEL to save the setting.
6. Use the UP or DOWN buttons to select EXIT and press SEL to exit the menu.

Power-On Mode


Factory default is five presses of the MIDDLE button to turn on power to prevent accidental activation in packaging. This mode may be disabled such that a single press of the MIDDLE button will turn on the unit.

1. Press the MENU button to enter the menu.
2. Press DOWN until PWR 5X is highlighted.
3. Press SEL to modify the mode.
4. Press UP or DOWN to enable or disable the 5X power-up mode.
5. Press SEL to save the setting.
6. Use the UP or DOWN buttons to select EXIT and press SEL to exit the menu.

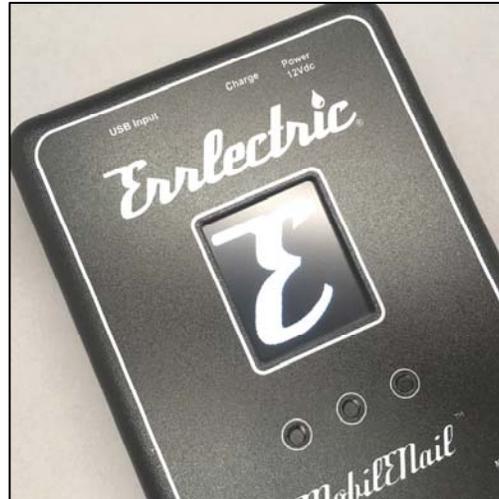

Setup

1. Install the heat-shield provided onto the nail stem.
2. Install the nail into a 14mm or 18mm female ground glass joint.
3. Plug the heater coil cable into the front of the Errlectric® MobilEnail®.
Use caution to align the pins correctly.
4. When using for the first time, ensure the battery is fully charged; see CHARGING INSTRUCTIONS.

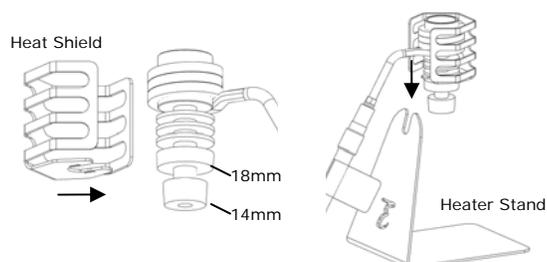

Install heat shield fully onto nail stem above the joint section. Use CAUTION not to bend the heater neck.

Store nail in heater stand when cooling or not in use. Keep cords from draping off of table.

Use When Charging

The battery can not charge as fast as it is drained by the heater. To allow the battery to charge, turn OFF the heater coil.